Cut track (top side at 'X') to P114
Fit wire link between P114_CW and C2

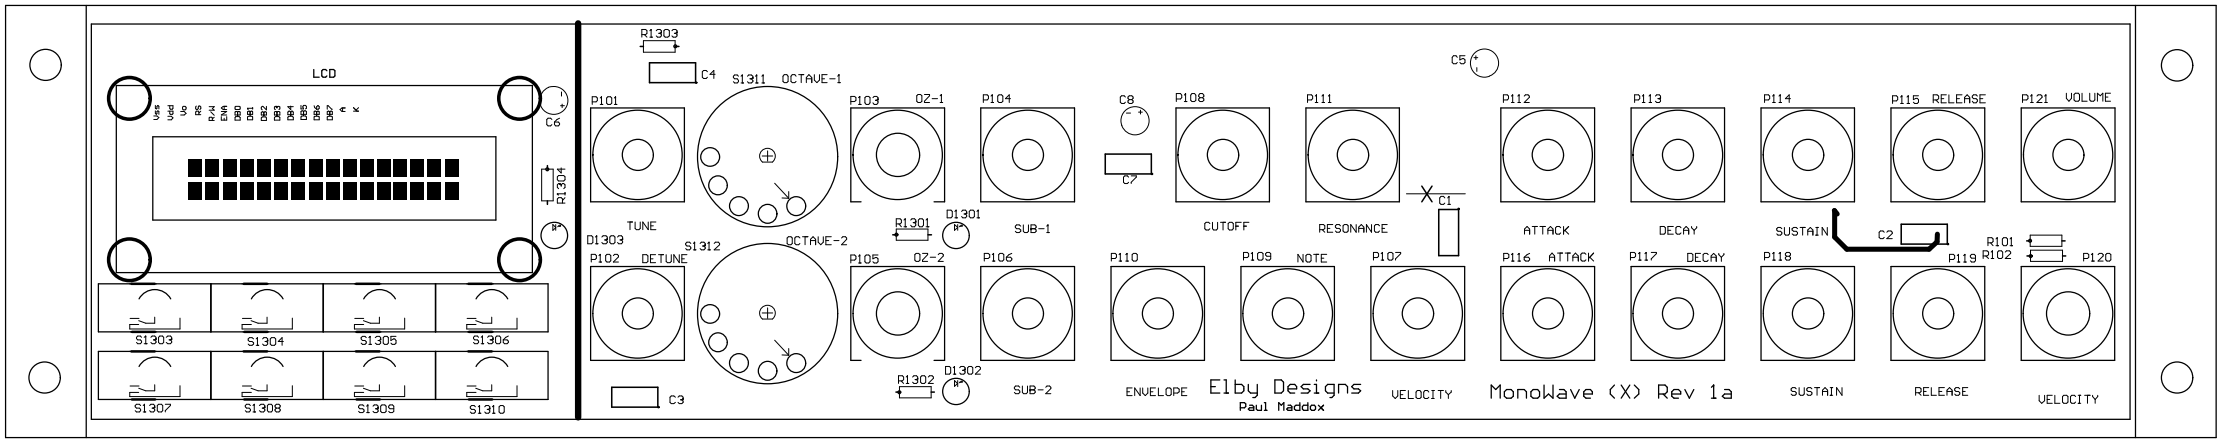

Note orientation of switches
'C NO NO' must be visible at the front (nearest the bottom edge of the pcb)