

PCB footprint for C703 is a bit small!


Place link between R1606 & R1617

Cut pin 12, link 12-13

Fit wire link between J301-2 to P301-1

Cut if LINK option required

Connect J301 and J401 together using screened-audio cable

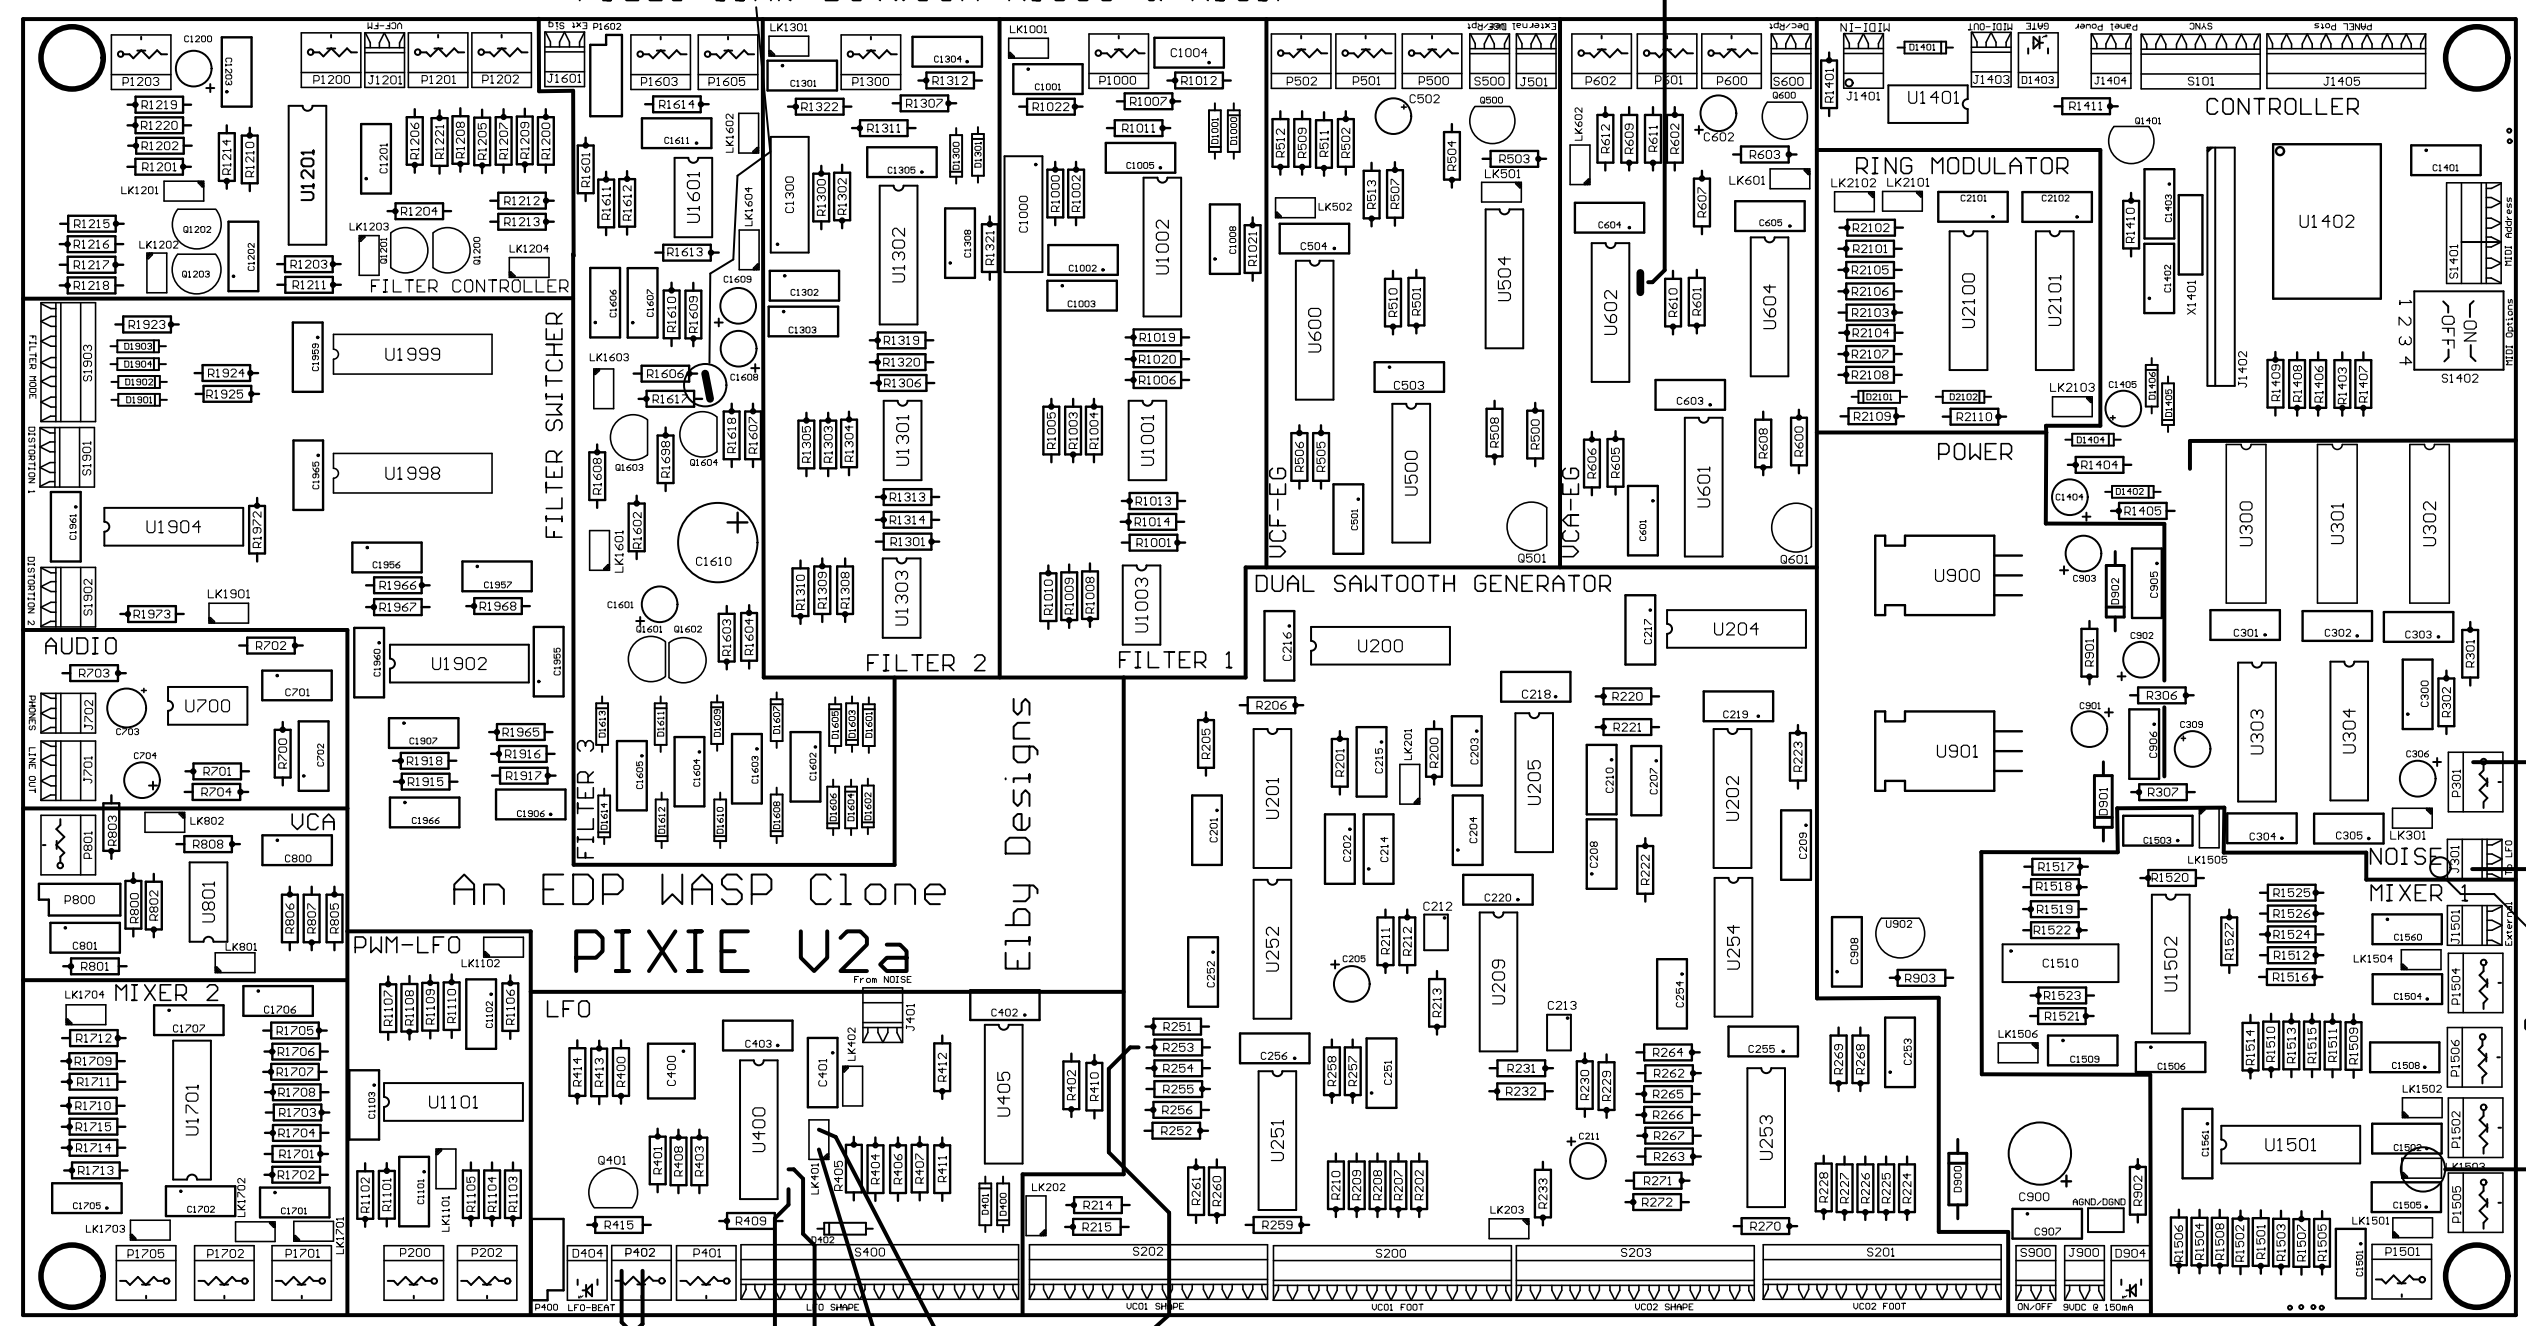

Elby Designs
 Kariong, NSW 2250
 Australia
www.elby-designs.com

Pixie a WASP Clone
 PCB Details

All dimensions in millimeters
 unless stated otherwise.

(A3) Not to scale

Rev: 2a

Date: 12/12/05