

PCB footprint for C703 is a bit small!

Place link between R1606 & R1617


Cut pin 12, link 12-13

Fit wire link between J301-2 to P301-1

Cut track - topside

Cut if LINK option required

Connect J301 and J401 together using screened-audio cable

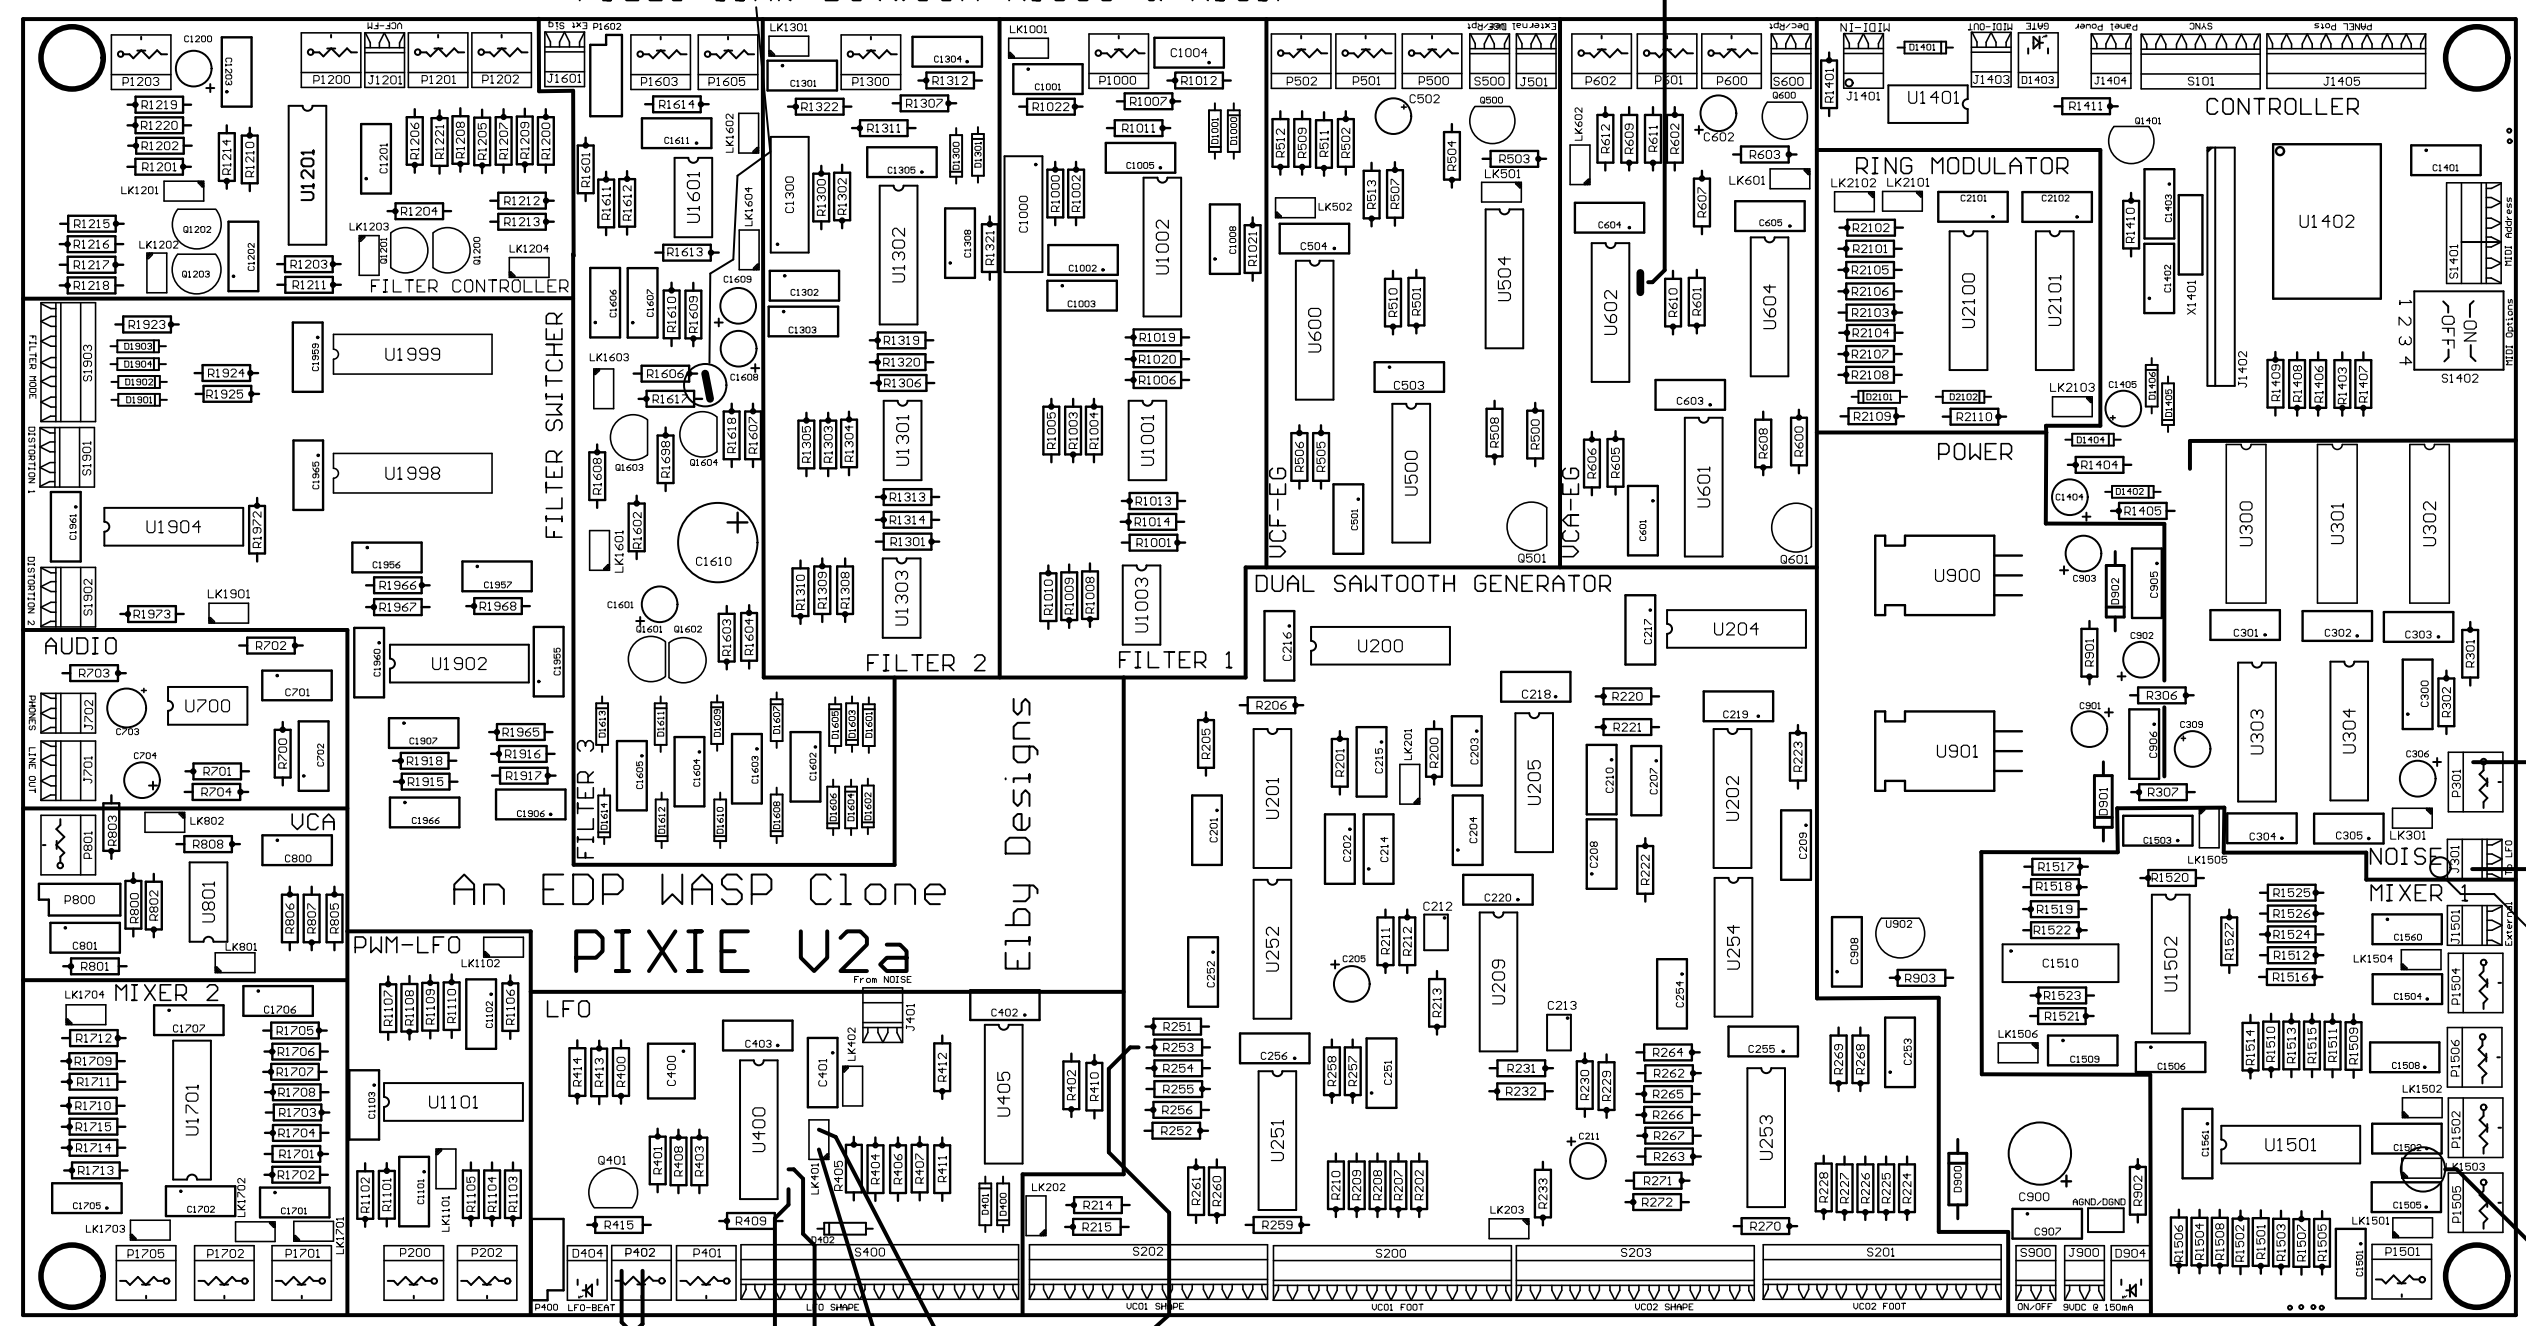

An EDP WASP Clone  
**PIXIE U2a**  
 From NOISE

Elby Designs

Elby Designs  
 Kariong, NSW 2250  
 Australia  
 www.elby-designs.com

Pixie a WASP Clone  
 PCB Details

All dimensions in millimeters  
 unless stated otherwise.

(A3) Not to scale

Rev: 2a

Date: 12/12/05