THIS DOCUMENT IS THE PROPERTY OF ELBY DESIGNS AND MUST NOT BE DISCLOSED/COPIED TO A THIRD PARTY WITHOUT CONSENT

A B C D

IF IN DOUBT-ASK

1 - Rail
2 - Rack Ear
3 - Side Panel
4 - Top/Bottom Cover
5 - Back Panel
6 - M5 Bolt
7 - M4 Bolt
8 - M5 Nut

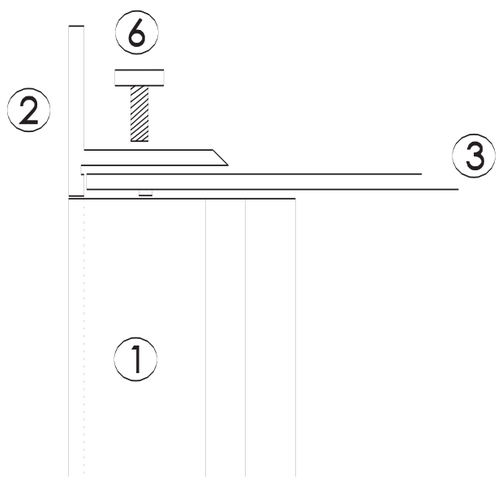

Detail A

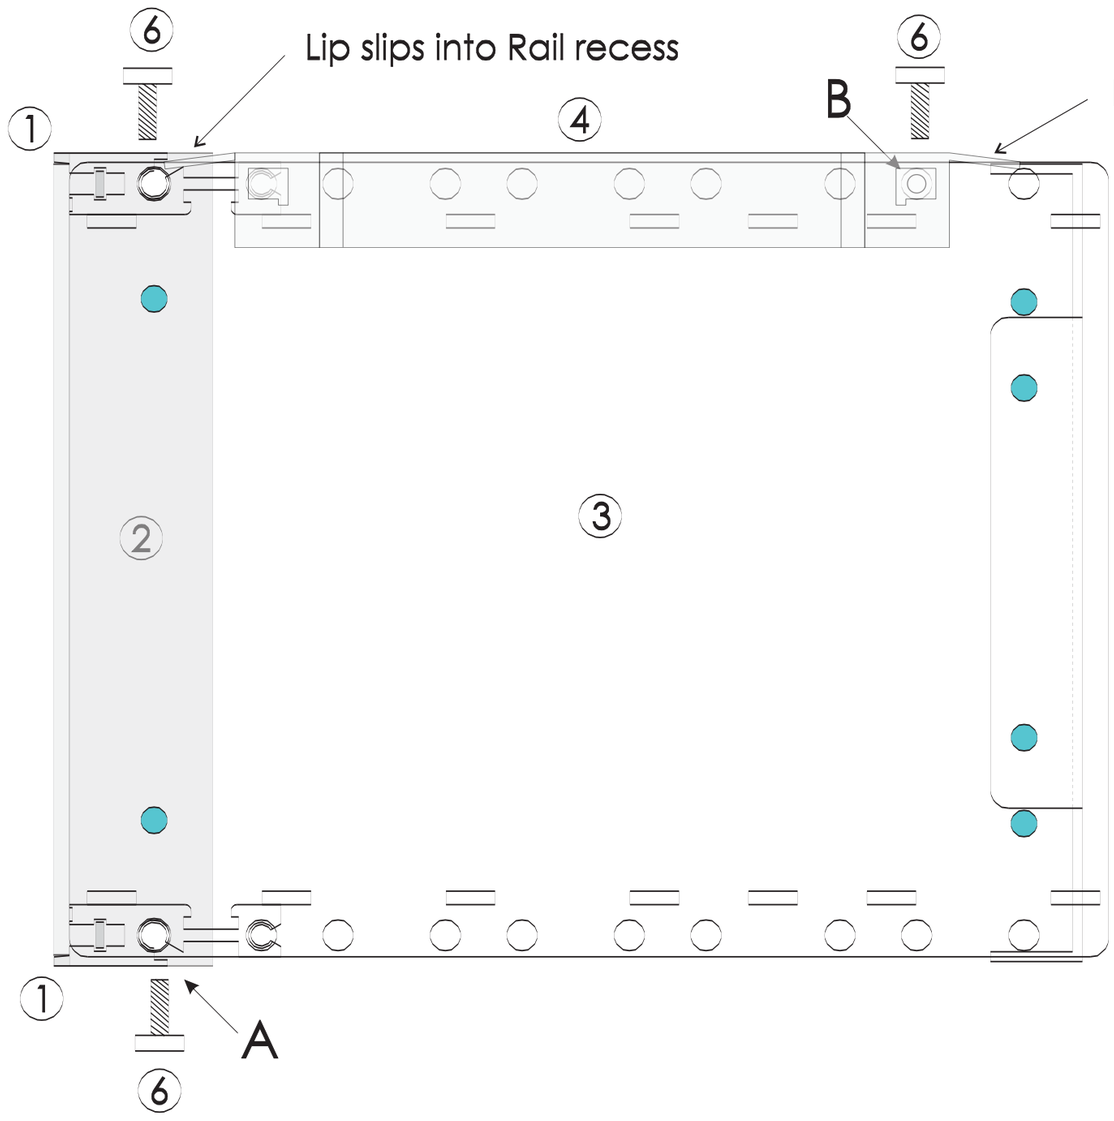

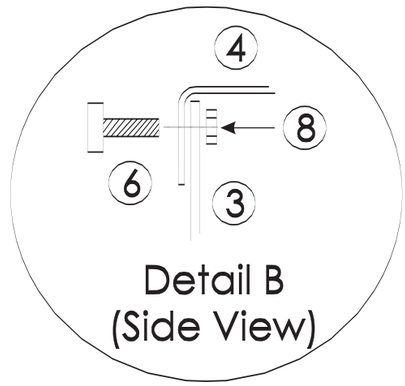

Detail B
(Side View)

To fit the Top Cover:-
Remove the top 2 M4 bolts securing the Back Panel and allow the Back panel to swing out a bit
Install the Top Cover by inserting the lip on one side into the recess towards the back of the top Rail
Lower the other side of the Top Cover down and loosely scure as shown in Detail B
Swing the Back Panel into position ensuring that the back lip of the Top Cover goes under the return on the Back Panel
Resecure the Back Panel and tighten the Top Cover fixings

ELBY DESIGNS
George Town
TAS 7253
Australia
ABN 70 022 727 605
www.elby-designs.com

REFERENCES

MATERIAL

FINISH

TOLERANCES UNLESS STATED
0 ÷ - 1
0.0 ÷ - 0.5
0.00 ÷ - 0.20
0.000 ÷ - 0.100
ANGLE ÷ - 1.5 DEG.
DIMENSIONS IN MILLIMETERS
GEOMETRIC SYMBOLS TO B.S.308

DRAWN | REV | TITLE: Subrack Cover Assembly Details

SCALE 1 : 1 | SHEET 1 of 1 | CODE | A3

4 3 2 1